

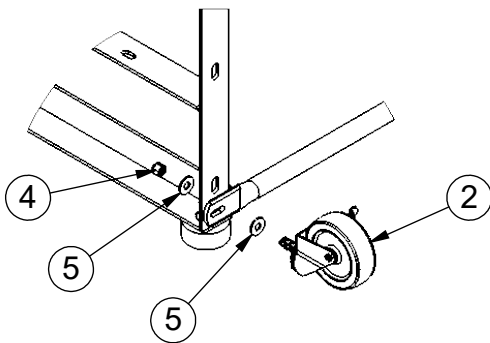
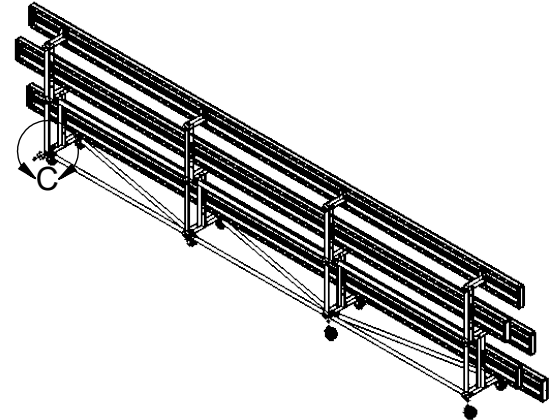



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VCITIPNROLLSPACER	2.5" X 1.0" UHMW ROLLER SPACER PAD	12
2	VCITPNRCWL	CASTER WHEEL WITH BRAKE 3/8-16 x 1-1/2" STEM x 4"	8
3	HWFLHD38114	3/8-16 x 1-1/4" FLAT HEAD SOCKET CAP SCREW 18.8	12
4	HWLN38	3/8-16 NYLOCK INSERT NUT	18
5	HWFLWA38	3/8" FLAT WASHER	25

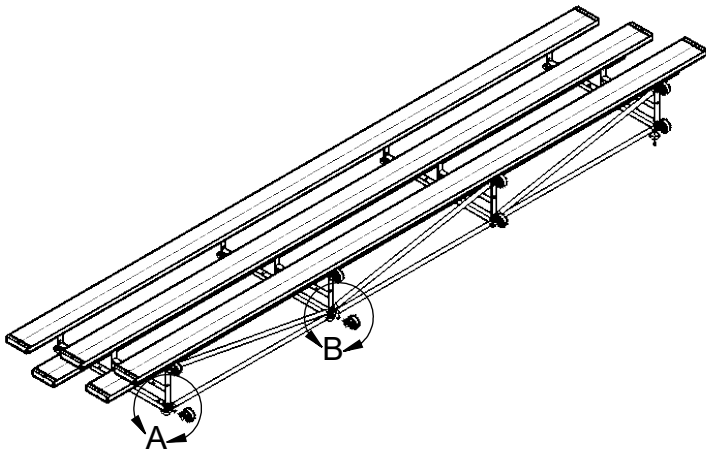

DETAIL A

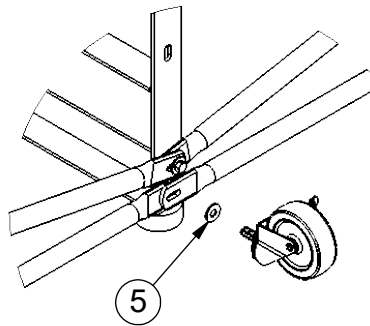

DETAIL B

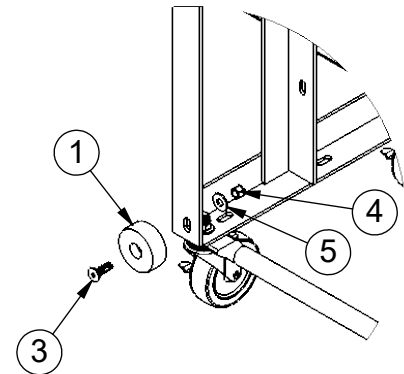

DETAIL C

### **INSTALLATION INSTRUCTIONS:**

Install transport system: mount the wheels and frame pads as shown. Frame pads are made of 2-1/2" x 1" thick plastic. Pads have counter sunk holes and are attached with flathead bolts. Caster wheels with brakes are 1" thick x 4" high wheels on a swivel base. Each caster wheel gets (2) washers and a nut. If there is interference of the rotation of the caster wheel, remove a washer from caster wheel.



Date: 11/11/22

Rev:

Drawn: CW

Sheet: 1 of 1

### **PRODUCT NAME**

TIP AND ROLL WHEEL CASTER/FRAME PAD  
INSTALLATION INSTRUCTIONS

MODEL NO.

**1171-21-TRA**