SITE FURNISHINGS

MODEL 1113-04 4 FT. 3"x4" RCP PLANK BENCH W/ BACK **MODEL 1113-06** 6 FT. 3"x4" RCP PLANK BENCH W/ BACK 8 FT. 3"x4" RCP PLANK BENCH W/ BACK **MODEL 1113-08**



1. LEG FRAME: 2-3/8" O.D. Galv. Steel Post welded to 4" Formed Steel


Flat Bar.


2. PLANKS: Recycled 3" x 4" HDPE plastic. (Actual 2-1/2" x 3-1/2")

3. HARDWARE: All hardware is stainless steel.

4. FINISH: All welds are ground smooth.

FOR POWDER COAT COLORS AND RECYCLED PLASTIC COLORS SEE BACK-INSIDE COVER OF PATTERSON-WILLIAMS CATALOG

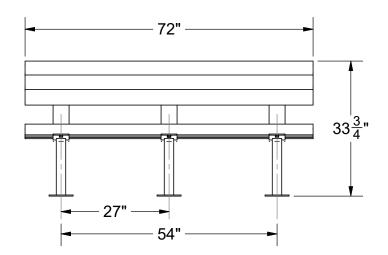


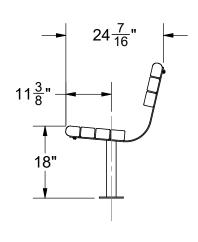

DC2

4 FT. BENCH ONLY HAVE 2 LEGFRAMES

(Note: Bench must be anchored. Anchoring hardware not included.)

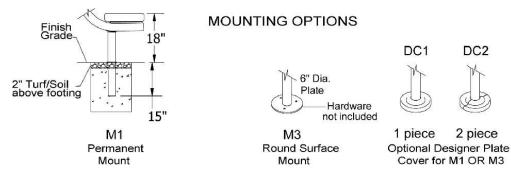




Date:	11/17/15		
Rev:	10/18/18		
Drawn:	MT		
Sheet:	1 of 2		

SPECIFICATION / INSTALLATION INSTRUCTIONS 3" x 4" RECYCLED PLASTIC

BENCH WITH BACK

MODEL NO. 1113

SITE FURNISHINGS

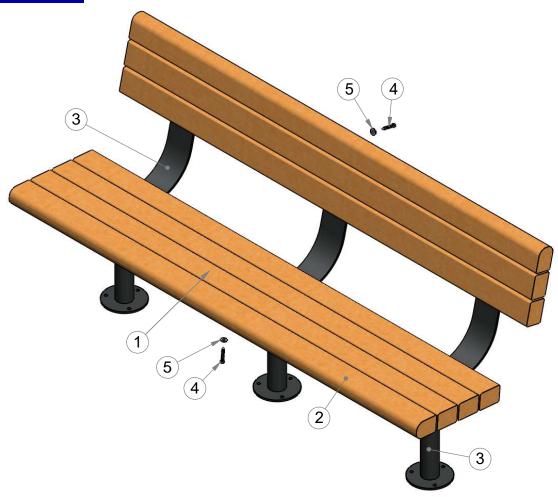

INSTALLATION INSTRUCTIONS:

- 1. To install planks to the frame, center the plank across the frames then center the plank over the slots in the 4 inch formed strap. Screw the 1/4 inch lag screw into the plank through the frame.
- 2. Insert the 3/8" spacers provided, between the planks, to insure even spacing.3. Install the self tapping screws through the frame into the planks (Some adjustment may be required).
- 4. Repeat steps (2 & 3) for backrest planks.

		4 FT	6 FT	8 FT
ITEM	MATERIAL LIST:	QTY	QTY	QTY
1	PLANKS (4 FT, 6 FT, OR 8 FT)	5	5	5
2	BULLNOSE PLANKS	2	2	2
3	LEG FRAMES	2	3	3
4	1/4" x 2" Stainless Lag Screw	14	21	21
5	1/4" Neoprene Zinc Washer	14	21	21
6	3/8" RCP Spacers	3	3	3

