
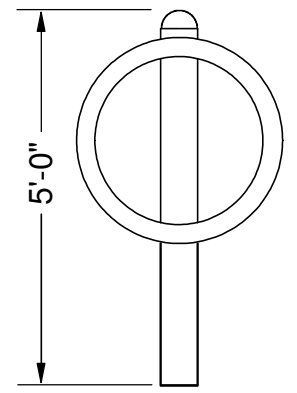
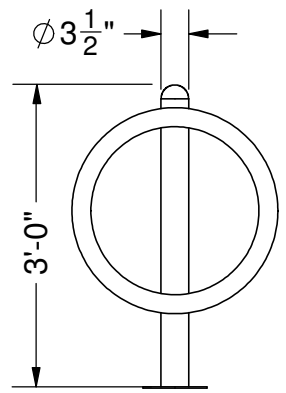




8 7 6 5 4 3 2 1

D

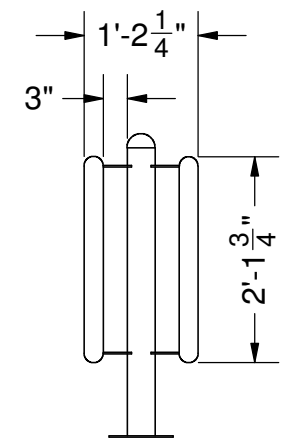


MODEL 1702-03

C

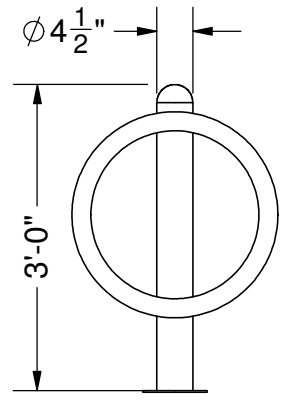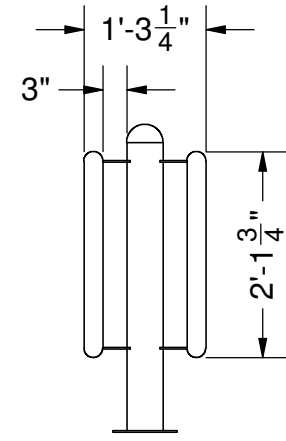

MODEL 1702-04

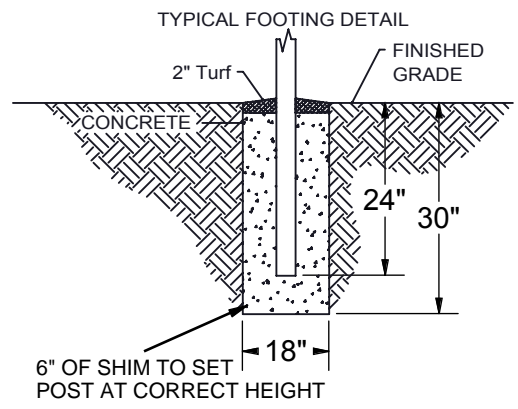



INSTALLATION INSTRUCTIONS:

1. Dig footing hole in proper location per footing detail above.
2. Center bollard in hole and shim from below so that the top of the cap is 36" above finish grade. Plumb post true vertical, readjust height as necessary and brace. Pour concrete. Let concrete set for 48 hours.
3. For surface mount installation, mark anchor holes by using the holes in the surface mount plate. Anchor in desired position. (Anchors not included)

NOTE: Footing sizes are based on average soil conditions. Loose and/or sandy soil is not average and footing sizes must be increased accordingly to meet local soil conditions. (Note: Bollard must be anchored. Anchoring hardware not included.)

B

A

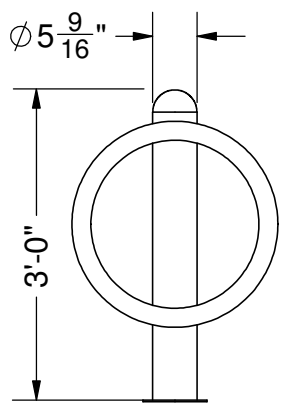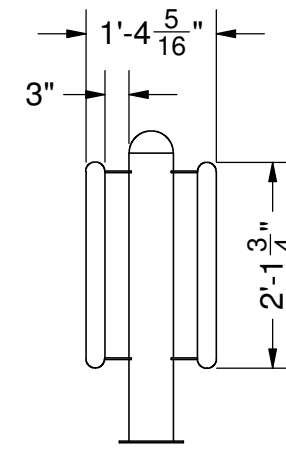

MODEL 1702-05

PATTERSON WILLIAMS MFG. CO. P.O. BOX 1290 - SALEM, IL 62881 (800) 851-0865 - www.pwathletic.com			
TITLE			
ROUND-UP BOLLARD BIKE RACK			
SIZE	DATE	MODEL NO	REV
A	4/13/2020	1702-03 1702-04 1702-05	
SCALE: NOT TO SCALE		DRAWN: AY	SHEET 1 of 1

8 7 6 5 4 3 2 1